



## **CONTINUOUS FORMS PROCESSING & MAILING EQUIPMENT**

### **SPEDO ACCESSORIES**



#### **SPEDO INTERFACE UNITS**

**SPEDO 2230 OPTICAL LOOP SWITCH** - Triggers Spedo cutter to continue processing when paper web is available.

**SPEDO 2231 OPTICAL LOOP INTERFACE** - Balances the paper loop between a Spedo cutter and printer, un-winder, etc. Connects to both cutter and paper source to control generated loop.

#### **SPEDO OUTFEED ACCELERATOR UNIT**

A self powered unit which is designed to accelerate forms leaving the cutter.

This unit fits easily to a Spedo cutter and will feed forms into folders, collators and divert stations.



#### **SPEDO WEB GUIDE - 3 BAR & 2 BAR**

Both types of guide are used for stabilising web entry to the Spedo cutter.

The 3 bar unit for use when a centre slit / merge operation is being applied and the 2 bar unit for restricting unwanted movement of paper loops.

#### **SPEDO 4100 WASTE EXTRACTION SYSTEM**

The Spedo 4100 system, connected to a forms cutter, removes all paper waste and dust created in the cutting process, i.e. strip cut, margin edge trim and fibre particles.

Removal of the dust greatly increases blade life and reduces maintenance costs.

#### **SPEDO 4200 BAG & FILTER SYSTEM**

Optional to the Spedo 4100 unit, the bag and filter system compacts all of the paper waste and dust into disposable sacks.

Especially important, paper dust, hazardous to health, is now safely contained within the sack for disposal.



**FOR FURTHER INFORMATION PLEASE CONTACT:**

SPEDO UK LTD, UNIT 5 RIVERWEY INDUSTRIAL PARK, NEWMAN LANE, ALTON, HAMPSHIRE GU34 2QL, UK

TEL: +44 (0) 1420 86546 • FAX: +44 (0) 1420 89892

E-MAIL: [spedo@spedouk.com](mailto:spedo@spedouk.com) • WEBSITE: [www.spedouk.com](http://www.spedouk.com)